
## How to fit and operate your Wooden Venetian blind

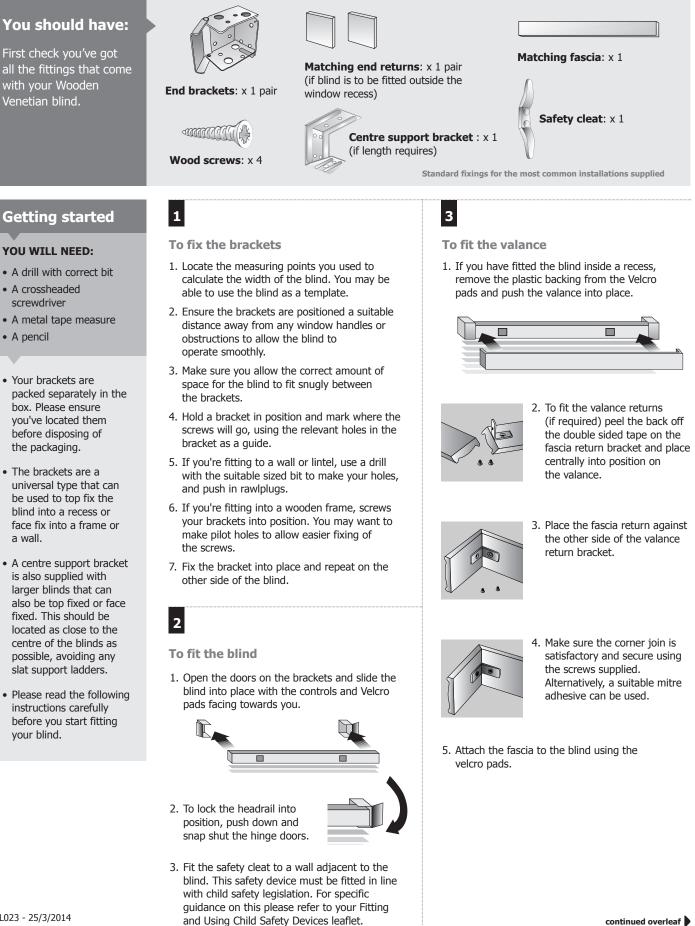



## Operating your blind:

Operating your blind is easy. Just follow these instructions.

- There are two controls that will operate the blind; a tilt control and a raise lower control.
- To raise the blind, pull the cord down until the blind is at the height you want and lock into place by moving the cords across the blind.
- To lower the blind, release the cord by moving them away from the blind, then let the cord slide through your fingers.
- Slats should be open when raising or lowering the blind.

• Move beds, cots and furniture away from the window.

• To adjust the angle of the slats, operate the tilt control cords as required.

## Safety tips:

• Do not let cords or chains hang loose. Make sure they are kept out of reach of children at all times.

There are things that you can do to reduce risk in your home.

- Do not tie loose cords and chains together.
- Check the condition of all safety devices if not used regularly and replace if the device is faulty.
- Replacements can be ordered on www.makeitchildsafe.co.uk