


PERFECT FIT SHUTTER LITE

Measuring & Fitting Instructions

MEASURING FOR PERFECT FIT SHUTTER LITE


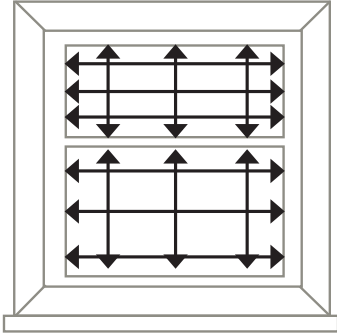


Make sure to record all measurements in millimetres

1. Measuring from gasket to gasket take 3 measurements from the bottom, middle and top of the glass size width and make a note of the smallest measurement accurate to the nearest millimetre. (Fig.1)
2. Do the same for the glass size height, taking measurements from the left, middle and right of the glass and making a note of the smallest measurement to the nearest millimetre.
3. Place a credit card over the corner of the window where the glass meets the gasket and take a note of the measurement from the glass to the edge of the card, this will be your bead depth and will determine what size bracket to use. (Fig.2)
4. Repeat steps 1-3 for the top window. (Fig.3)
5. If the window has a handle then take a measurement from the left hand gasket to the centre of the handle plate and make a note of the measurement. (Fig.4)



INSTALLING PERFECT FIT SHUTTER LITE

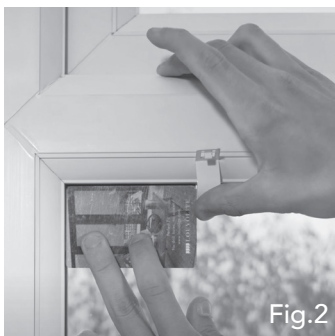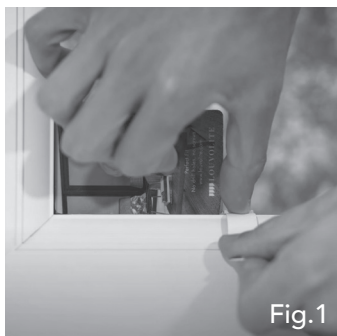

1. Using a credit card as a guide slot a bracket into the corner of each gasket seal on the bottom window. (Fig.1) (Fig.2) Repeat for the top window. (Fig.3)



2. Once all brackets are in place the shutter is ready to be installed. Line the cut out in the bottom of the frame with the bottom brackets. (Fig.4)
3. Once the bottom of the frame is clipped in, push the top side of the frame into the top brackets. (Fig.5)
4. Repeat steps 1-3 for the top window. (Fig.6)
5. Your Perfect Fit Shutter is now installed.

Visit the Louvolite website to view the links to all of our assembly instructional videos.

 LOUVOLITE

